


Starting point: for a correct installation of PV modules, you should start from the middle of the rack and proceeding before in one direction and then in the other one, as illustrated.

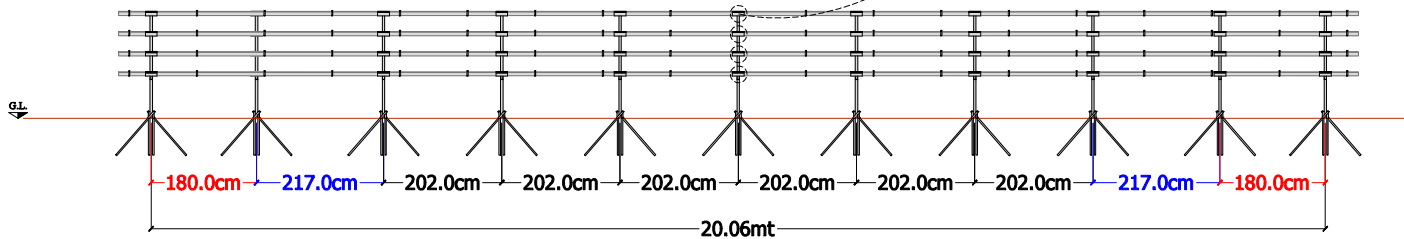

PERMITTED TIGHTENING TORQUE OF MAX 10 Nm (to be verified with the prescriptions of the module manufacturer).

	NAME	DATE	Solelgrossisten Stock order		
DRAWN			TITLE Installation of "C" plates		
CHECKED					
			SIZE	DWG N°:	REV
			SCALE:	WEIGHT:	SHEET



TreeSystem s.r.l.
Via Moraro n°22, 35020, Pozzonovo (PD)
Tel/fax +390429773082